

JOYMAN MP4 WATCH



MT833

User Manual

Overview

Earphones/USB socket



Power on/off

Press and hold "power" button for 3 seconds to power on, to power off press and hold for 2 seconds.

Charging

Plug USB cable to earphone socket, other end to USB port in your PC computer, fully charging takes about 4 hours.

Installing microSD card

Turn off the device, put microSD card into SD card slot until it is hatched, now power on the device.

Menu operating

When in home screen press "menu" button to show menu icons. To enter press "power" button, to go back press "menu" button, to navigate press "-" or "+" button. To resume home screen press and hold "menu" button for 1 second, then press again shortly.



Time setting

Go to "menu/setting/system time", press "power" button, adjust value with "-" or "+" button – repeat this operation for other fields. When finished press "menu" button to exit.

FM radio

Go to "menu / FM radio / options / auto search", when auto search is finished you can press "power" button to switch next radio station.

Menu structure

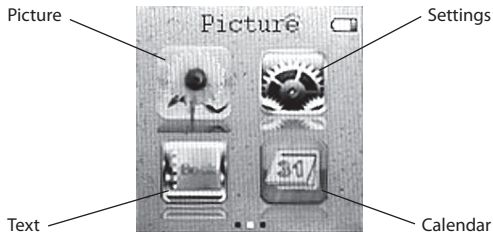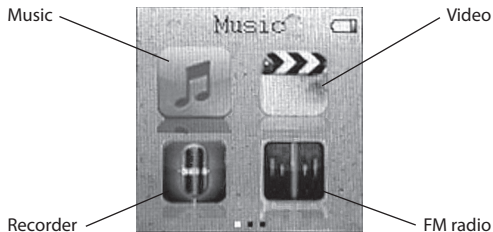

Music

Options when music is played:

- Volume
- Cycle mode
 - Normal
 - Repeat one
 - Folder
 - Repeat folder
 - Repeat all
 - Random
 - Intro
- EQ Settings
 - Natural
 - Rock
 - Pop
 - Classic
 - Soft
 - Jazz
 - DBB
 - SRS WOW
- Replay mode
 - Repeat mode
 - Replay times
 - Replay gap
- Exit

Options when music is paused:

- Card folder
- Delete file
- Delete all
- Exit



Video

- Options:
 - Card folder
 - Delete file
 - Delete all
 - Cycle mode
 - Normal
 - Repeat one
 - Folder
 - Repeat folder
 - Repeat all
 - Random
 - Intro
 - Volume
 - Exit



Recorder

- Options:
 - Card folder
 - REC type

- 32kBit rate
- 64kBit rate
- 128kBit rate
- 256 kBit rate

- AVR level
- AVR mode
 - Normal
 - AVR mode
- Exit



FM radio

- Options:
 - Volume
 - Save channel
 - FM record
 - Delete channel
 - Delete all
 - Auto Search
 - Common band
 - Japan band
 - Exit



Picture

- Options:
 - Card folder
 - Setting
 - Manual replay

- Auto replay
- Delete file
- Delete all
- Exit



Settings

- System time
- Backlight (function is off when value is 0)
- Language
- Off time (function is off when value is 0)
- Sleep mode (function is off when value is 0)
- Memory info
- Firmware version
- Firmware upgrade
- Exit



Text

- Options:
 - Card folder
 - Setting
 - Manual replay
 - Auto replay
 - Delete file
 - Delete all
 - Exit



Calendar

Reset function

If you encounter strange behaviour or device hanged up you can put straighten paper clip into earphone socket, at the bottom there is a reset switch.

*Functions and technical specification of device are subject to change without prior notice. For technical support please visit **www.media-tech.eu***